



NOT 2156





NOT 2156






NOT 2156

FR NOTICE DE POSE A USAGE PROFESSIONNEL / LES PHOTOS ET LES DESSINS NE SONT PAS CONTRACTUELS
 GB FITTING INSTRUCTIONS FOR PROFESSIONAL FITTERS / THE PHOTOGRAPHS AND THE DRAWINGS ARE NOT CONTRACTUAL
 ES INSTRUCCIONES DE MONTAJE PARA USO PROFESIONAL / LAS FOTOGRAFÍAS Y LOS DIBUJOS NO SON CONTRACTUALES
 P MANUAL DE MONTAGEM PARA UTILIZAÇÃO PROFISSIONAL / AS FOTOGRAFÍAS E OS DESENHOS NÃO SÃO CONTRATUAIS
 DE MONTAGEANLEITUNG FÜR PROFESSIONNELLEN EINSATZ / DIE FOTOS UND DIE ZEICHNUNGEN SIND NICHT VERTRAGLICH
 IT ISTRUZIONI DI POSA AD USO PROFESSIONALE / LE FOTOGRAFIE ED I DISEGNI NON SONO CONTRATTUALI
 NL MONTAGEHANDLEIDING VOOR PROFESSIONEEL GEBRUIK / DE FOTO'S EN DE TEKENINGEN ZIJN NIET CONTRACTUEEL

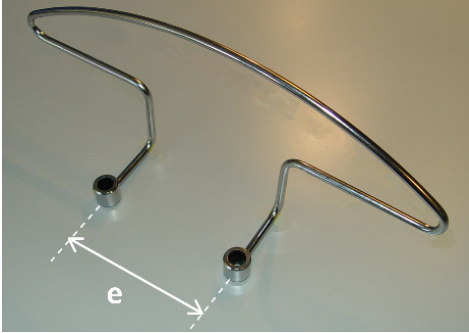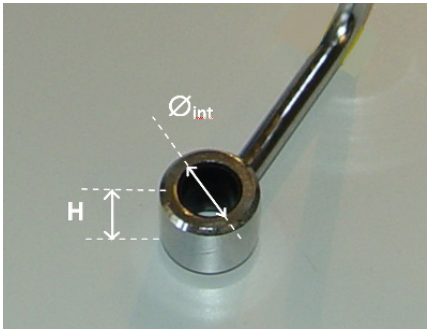Réf.		
16 079 377 80	e = 150 mm Øint = 14 mm H = 12 mm	208 / 2008 / 308 (T9) / 508 (W2) / C4 Picasso (B78) / 508 (R82 R83)
16 079 381 80	e = 150 mm Øint = 14 mm H = 24 mm	1007 / 207 / 307 / 308 (T7) sauf CC / 3008 (T84 / P84) / 5008 (T87 / P87) / 807 / PARTNER (B9) C2 / C3 (A31) / C3 (A8) / C3 PICASSO / DS3 / DS4 / C8 / BERLINGO (B9) / C4 (B7) / C4 PICASSO (B58) / C5 (X7) / 408 / C4L / 407 / EXPERT III / JUMPY III // Expert VP (K0) / Traveller (K0) / Jumper VP (K0) Dispatch VP (K0) / Space Tourer (K0) / C3 AIRCROSS (A88) / DS7 (X74E) / C4 Cactus (E3 / F3)
16 079 382 80	e = 130 mm Øint = 14 mm H = 24 mm	106 / 206 / 206+ / 406 / 607 C5 (X3) / C5 (X4) / EVASION / XANTIA (X1) / XANTIA II (X2) / XSARA (N5) / XSARA (N6) / XSARA PICASSO
16 079 380 80	e = 150 mm Øint = 12 mm H = 24 mm	4007 / C-CROSSER / 4008 / C4-AIRCROSS / ION / C-ZERO
16 097 341 80	e = 110 mm Øint = 14 mm H = 24 mm	301 / C-ELYSEE / BERLINGO (K9) / RIFTER (K9)

MONTAGE SUR SIÈGE AVANT INTERDIT SI PASSAGER À L'ARRIÈRE
MUST NOT BE FITTED ON FRONT SEAT IF THERE IS A PASSENGER IN THE BACK
PROHIBIDO SU MONTAJE SI VIAJA UN PASAJERO DETRÁS
BEFINDEN SICH PASSAGIERE IM FOND, IST DIE MONTAGE VERBOTEN
MONTAGGIO SU SEDILE ANTERIORE VIETATO IN PRESENZA DI PASSEGGERI SUL SEDIL POSTERIORE
MONTAGE OP VOORSTOEI, NIET TOEGESTAAN INDIEN PASSAGIER AANWEZIG OP ACHTERBANK
MONTAGEM NO BANCO DA FRENTE EXCEPTO SE HOVER PASSAGEIRO ATRÁS

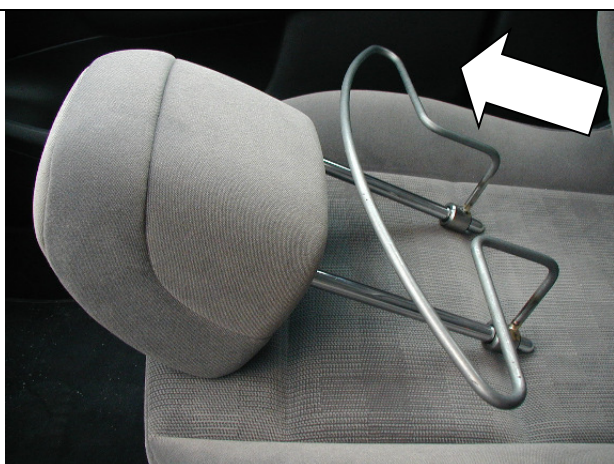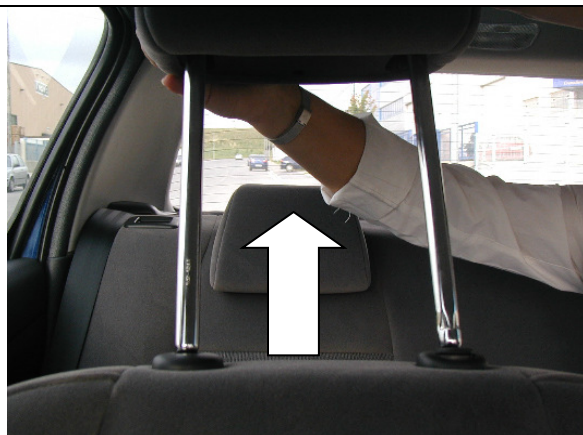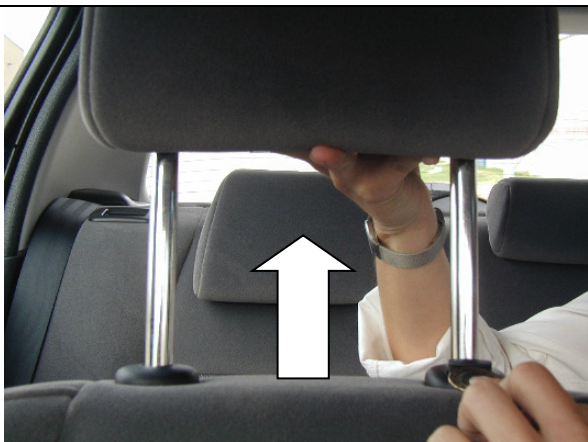

PEUGEOT 508

